


$\frac{3}{4}$ VIEW SHOWING PIPES

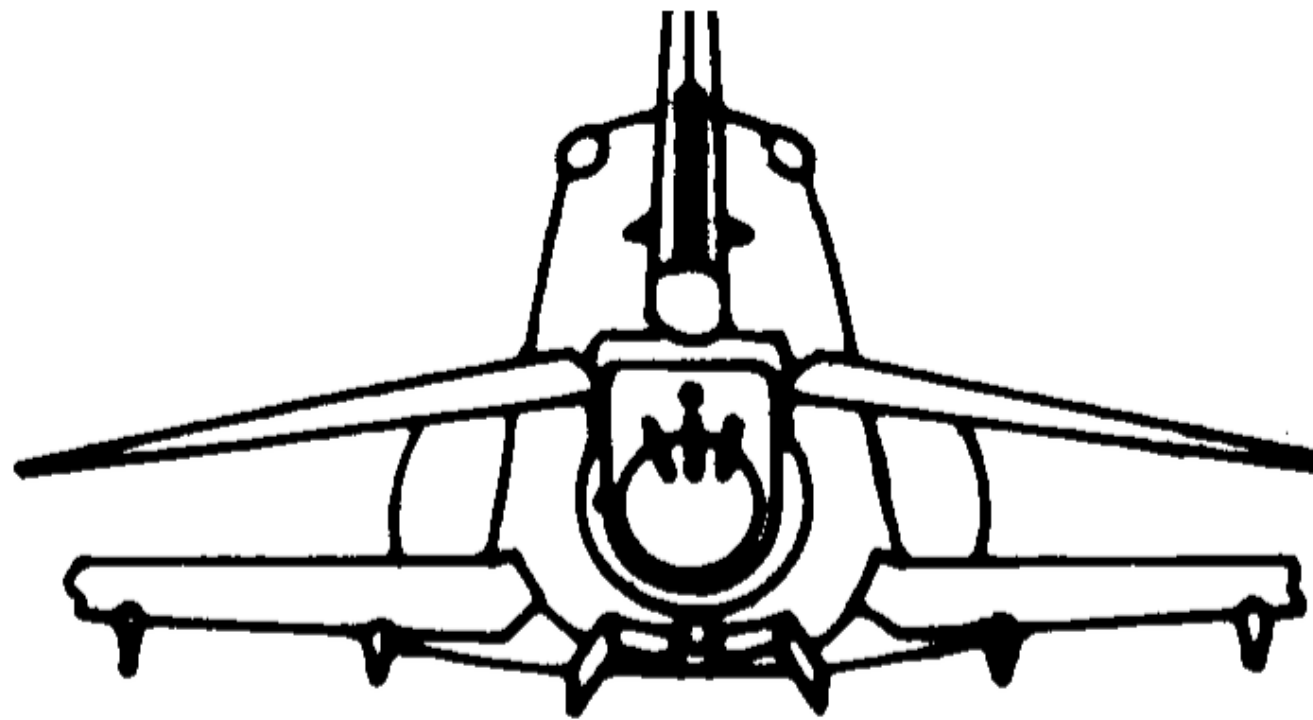

REAR VIEW SHOWING POSITION
OF PIPES AND STRAKES

RED ARROWS HAWK

IMPORTANT: All castings should be washed in soapy water before assembly and painting.

Parts designed to fit the AIRFIX HAWK.

Remove kit tail pipe at the last panel line and substitute casting. The small pipes have to be cut from the sprue, cemented in place and then cut to length as shown in the scale drakes is The position of the strakes is also shown. The smoke pod is cemented in place of the gun pod supplied with the kit.

This kit also needs wing fences, these are easily made from plasticard.

We would like to thank Mr. Keith Melville for the drawings.

**WE ALSO MAKE THE MARTIN BAKER
MK 10B EJECTOR SEATS FOR THIS
AIRCRAFT**