

GERMAN Su-22M-4 FITTER-K

ASSEMBLY INSTRUCTION





切り取ってください。
REMOVE
ENTFERNEN
RETRIERE
SEPARARE
切去



おもりを入れてください。
INSERT BALLAST
BALLAST ZUGEBEN
ALESTER
AGGIUNGERE ZAVORRA
放入重物

- Ballast is not included.
- Ballast ist nicht im Bausatz enthalten.
- Le lestage n'est pas inclu.
- Zavorra non inclusa.
- El lastre no está incluido.
- 不包括配飾物

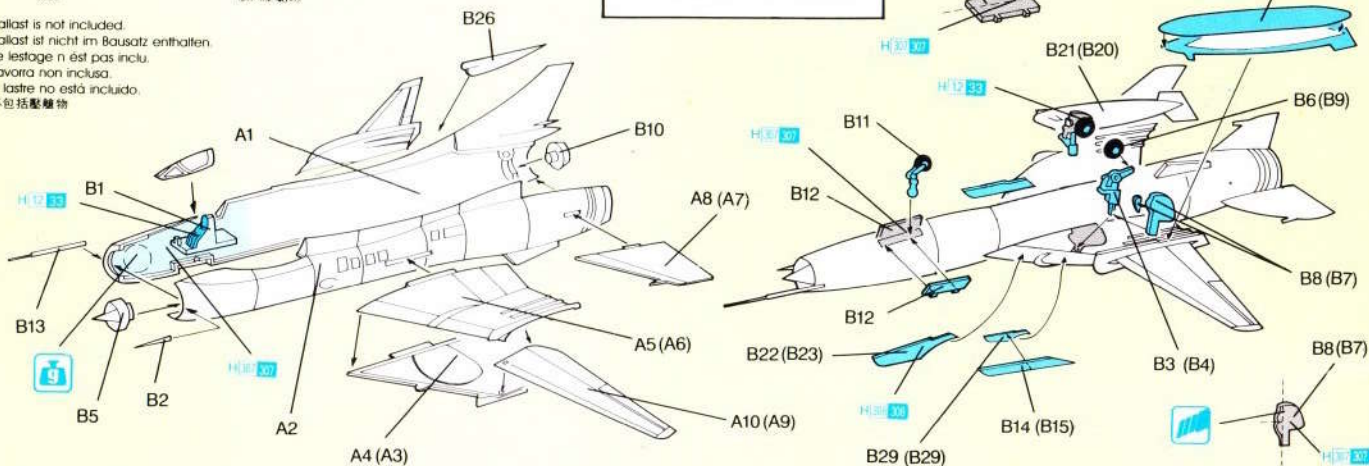

MARKING AND PAINTING

■ Correct Method for Applying Decals

- ① Clean model surface with wet cloth.
- ② Cut each design out of decal sheet and dip them in warm water for 20 seconds.
- ③ Check with finger tip if design is loose on base paper. If so, place it on proper position on model and slide off base paper leaving design on model.
- ④ Move design to exact position with wet finger tip, and push out excess water and air bubbles under decal with soft cotton cloth.
- ⑤ When decals get dry, wipe off with wet cloth excess glue left around decals.

■ 貼上水印標貼的正確方法：

將各標貼從紙上切出，浸入溫水中20秒，再放到模型表面正確位置上，將底紙移去，用柔軟的布輕壓，確保效果完美。

H 1 GUNZE SANGYO AQUEOUS HOBBY COLOUR
ITALERI PAINT NO. ■ GUNZE SANGYO MR. COLOUR

H 4 4	YELLOW	1514	H 10 30	GRAY FS 36320	1741
H 12 33	FLAT BLACK	1749	H 10 30	LIGHT GRAY FS 36375	1726
H 10 20	STEEL	1415	H 10 30	BROWN FS 30219	1742
H 10 30	DARK GREEN FS 34092	1764	H 10 30	LIGHT GREEN	1716
H 10 20	OLIVE DRAB FS 34087	1711	H 10 30	FIELD GREEN FS 34097	1712

