


ASSEMBLY INSTRUCTIONS FOR SUPERQUICK GOODS DEPOT BUILDING NO. 7

Remove parts as required by nicking with a knife at uncut points. Most liquid glues or gums are suitable adhesives, but a P.V.A. white glue, such as LePage's 'Bond-Fast' is particularly recommended.



- 1 Place Front Wall A1 face down and glue Backing A2 to it, back to back and flush along the bottom edges. A1 must overlap A2 an equal amount down the two side edges to form rebates into which Side Walls C1 and C2 will be glued. Partly fill in the Backing with the two triangular shapes to be found in the cutout above C1. Fix windows with strips of 'Sellotape' and apply Plinth P1.
- 2 Remove Doors D1 from Back Wall B1. Attach Backing B2 to B1 as above but this time gluing the face of B2 to the back of B1. Glue one Door to each side of the opening, where shown, and apply Plinths P2. Add Canopy Support, glued flush against the top of the doors and in line with their outer edges.
- 3 Take Side Wall C1 and glue Entrance Strengthener E1 to the back of the narrow vertical portion, flush at the bottom and set in equally down the two sides. Trim the overlapping corner. To the underside, running along the top of the opening, glue a Girder G to show half of its depth. Glue one Entrance Return into the inner rebate formed by E and pack with odd strips of board to keep it at right angles. Add Platform End Support H. Repeat with C2, attaching Door D2 if the model is to be used without outside platforms. The model can be enlarged to become a full size Goods Depot with outside loading banks and space for freight and a crane by attaching sections from SUPERQUICK Kit No. 1 STATION PLATFORM to one or both sides of the building.
- 4 Assemble B, C1 and C2, glue down the Platform (supported on H and B2) and add Platform Front Wall J. Glue A in place, add Plinths P3 and glue down the Roof after glazing. Apply Ridge Tiles.
- 5 The Office Walls can now be prepared and assembled with Corner Strengtheners S inserted to keep them square, and glued to the main building. Add the Roof, Plinth P4, Chimney, Ramp and Barge Boards. Apply the Canopy Sides, glued against each side of the Canopy Support and in line at the top. Strengthen Valance and glue it in place followed by the Canopy Roof.

RIDGE TILES. Cut through along short lines marked Z. Using these cut lines as a guide, score on

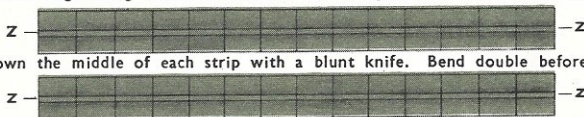

underside down the middle of each strip with a blunt knife. Bend double before cutting out.

CHIMNEY Score dotted lines before cutting out.

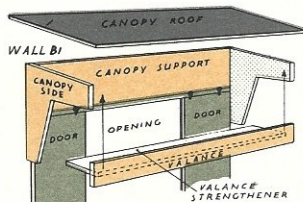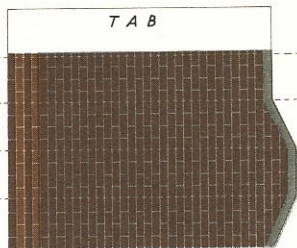

CHIMNEY POT. Cut out, dampen and roll tightly between finger and thumb. Glue roll end. By revolving the point of a blunt pencil in it, open up the indent formed at the top. Glue in position and blacken inside top.

