

LARGE WING INSIGNIA DECAL  
TOP SIDE RIGHT WING

NUMBER DECAL  
SAME OTHER SIDE

CUT PINS  
CEMENT  
INTO WING HOLES

PAINT WHEELS AND  
MOTOR BLACK

DECAL SAME  
BOTH SIDES

SMALL WING INSIGNIA DECAL  
BOTTOM OF LEFT WING

TO HOLD DECALS FIRMLY ONTO  
PLASTIC. WHEN DRY, COVER  
WITH THIN COAT OF VARNISH.

IF MODEL IS TO BE PAINTED USE ENAMEL ONLY.  
DO NOT USE LACQUER OR LACQUER BASE  
MATERIALS AS THESE SOFTEN THE PLASTIC.  
APPLY ALL DECALS AFTER MODEL IS PAINTED. D

# SPIRIT of ST. LOUIS



KIT NO. 520

MANUFACTURED UNDER LICENCE BY

MODEL TOYS LTD., 11, GOLBORNE ROAD, LONDON, W.10


MADE IN ENGLAND

*for True  
Scale Models*

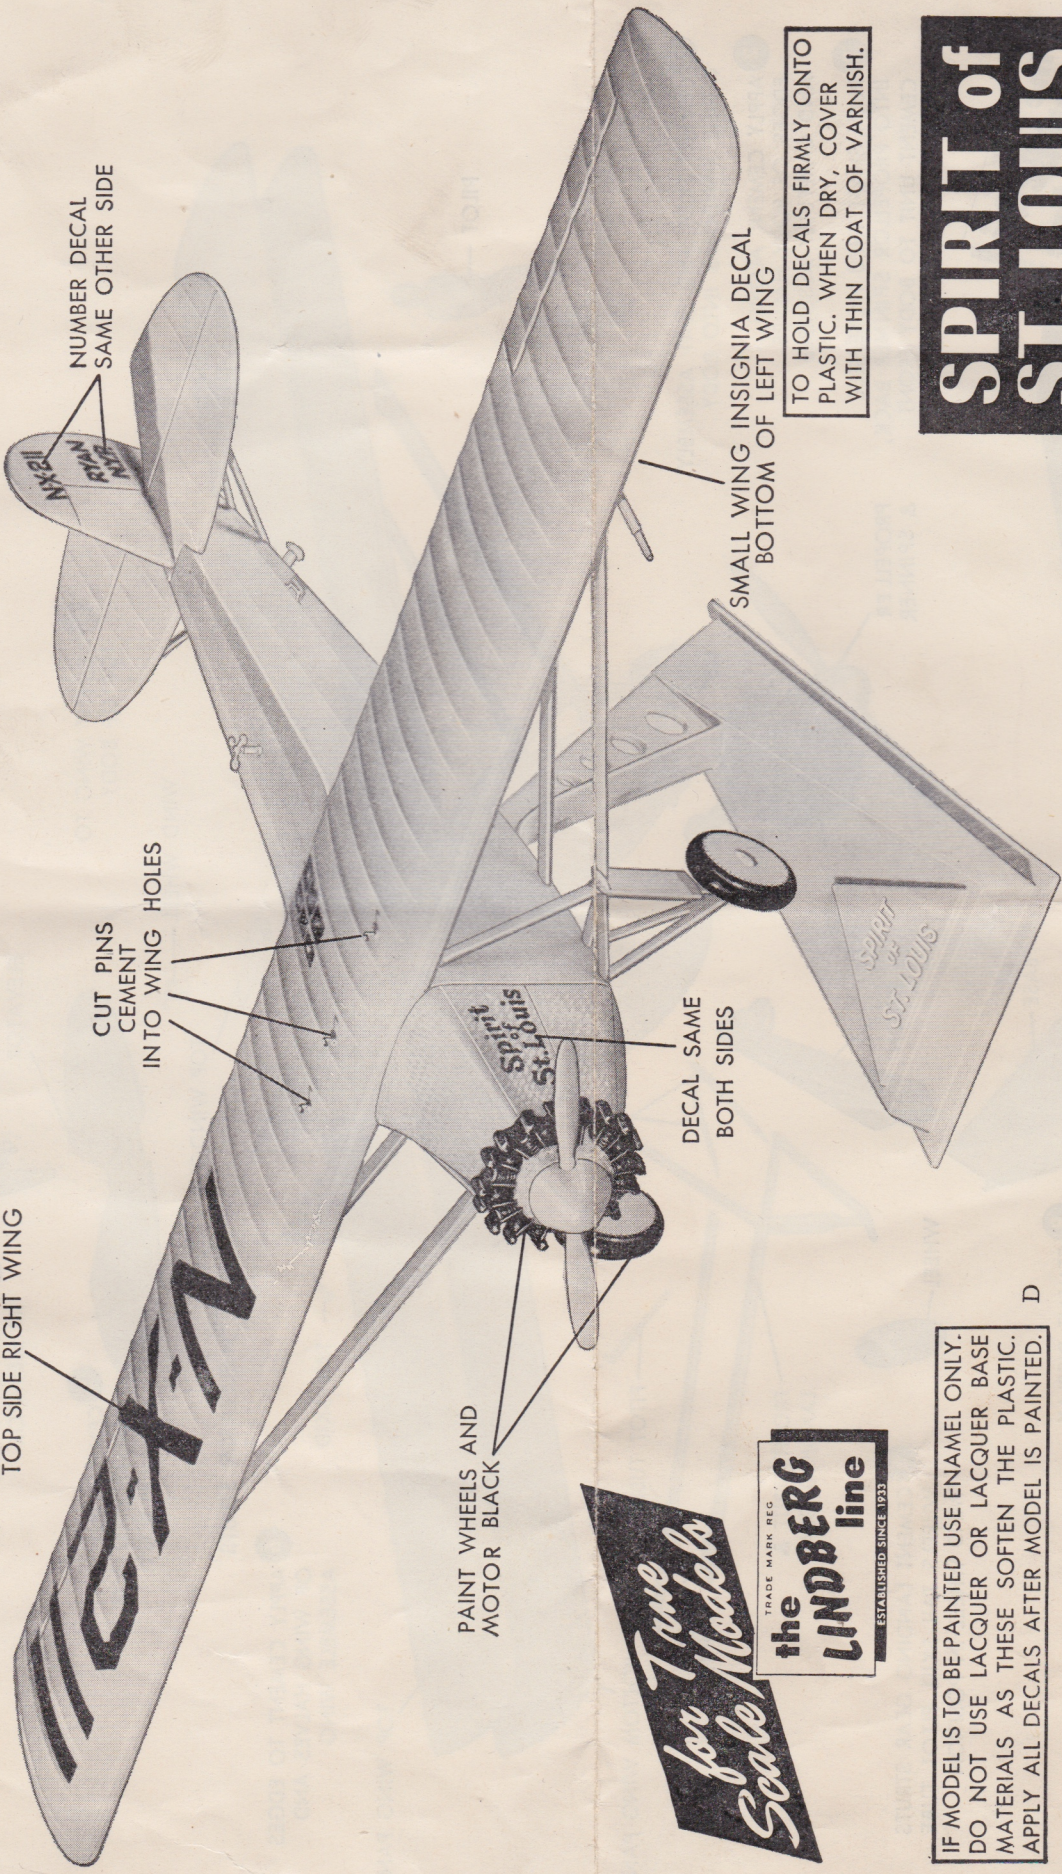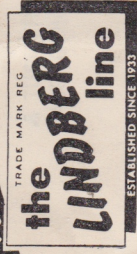

ASSEMBLE MODEL IN SUGGESTED NUMERICAL SEQUENCE.

NOTE: PARTS THAT FIT SNUG, APPLY CEMENT FIRST TO EASE TENSION.

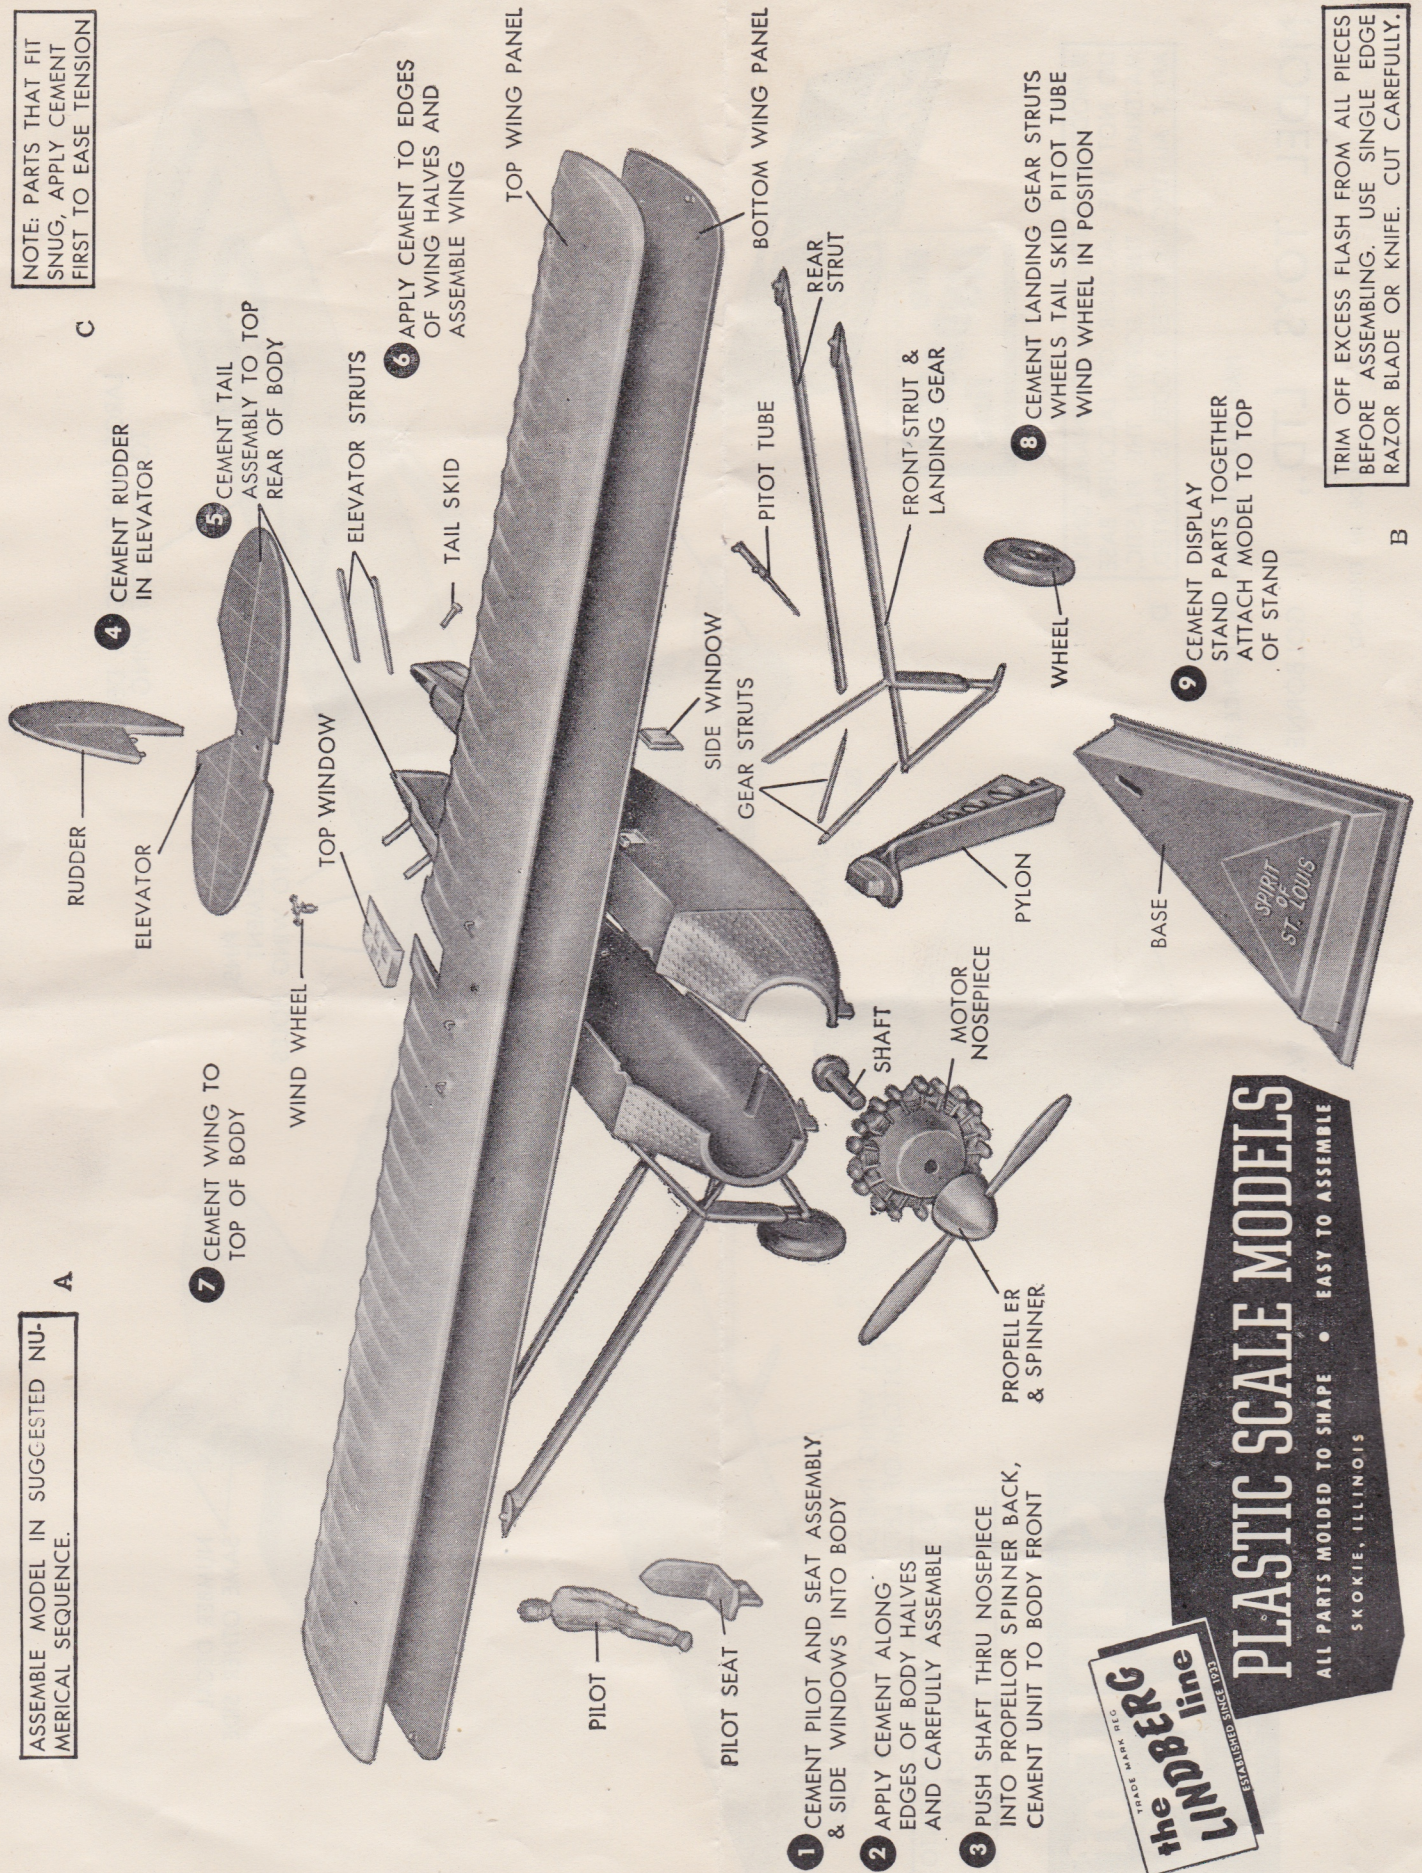

**7** CEMENT WING TO TOP OF BODY

**4** CEMENT RUDDER IN ELEVATOR

**5** CEMENT TAIL ASSEMBLY TO TOP REAR OF BODY

**6** APPLY CEMENT TO EDGES OF WING HALVES AND ASSEMBLE WING

**1** CEMENT PILOT AND SEAT ASSEMBLY & SIDE WINDOWS INTO BODY

**2** APPLY CEMENT ALONG EDGES OF BODY HALVES AND CAREFULLY ASSEMBLE

**3** PUSH SHAFT THRU NOSEPIECE INTO PROPELLER SPINNER BACK, CEMENT UNIT TO BODY FRONT

**8** CEMENT LANDING GEAR STRUTS WHEELS TAIL SKID PITOT TUBE WIND WHEEL IN POSITION

**9** CEMENT DISPLAY STAND PARTS TOGETHER ATTACH MODEL TO TOP OF STAND

TRADE MARK REG  
**the LINDBERG line**  
 ESTABLISHED SINCE 1933

**PLASTIC SCALE MODELS**

ALL PARTS MOLDED TO SHAPE • EASY TO ASSEMBLE  
 SKOKIE, ILLINOIS

TRIM OFF EXCESS FLASH FROM ALL PIECES BEFORE ASSEMBLING. USE SINGLE EDGE RAZOR BLADE OR KNIFE. CUT CAREFULLY.

B

C

A