


READ BEFORE ASSEMBLY

1. Remove the excess print gates from the parts with a cutter carefully.
2. Should the parts warp, you may straighten the parts with a tweezer in the hot water.
3. Apply superglue to attach the (green) parts as shown in the diagram.

PARTS LAYOUT

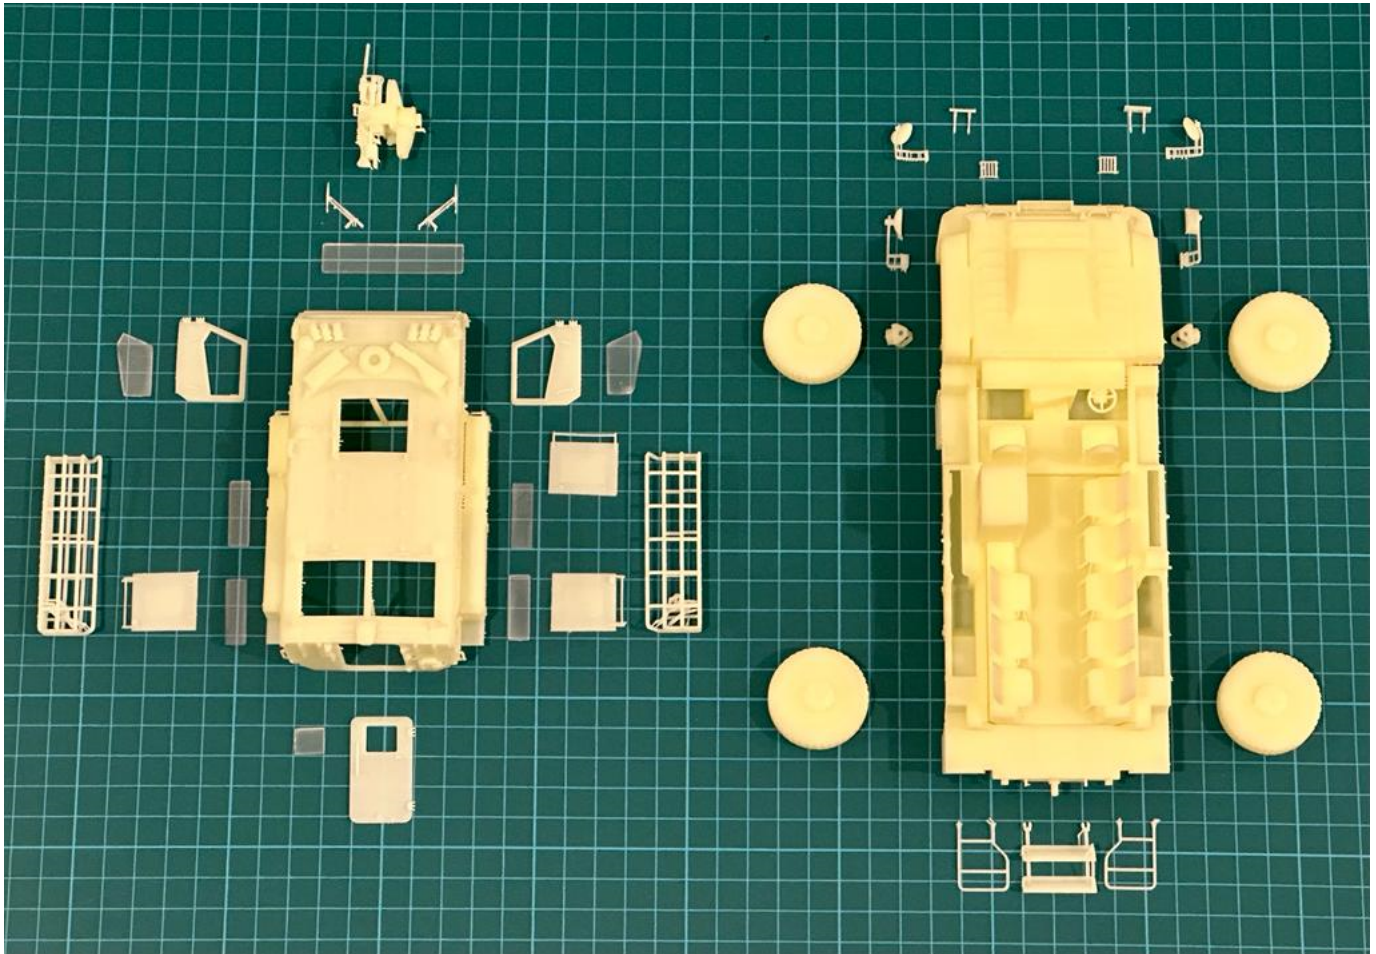

PARTS ATTACHMENT

Attached the green coloured parts as shown in the diagram accordingly.

