


**FROC**<sup>®</sup>

**1:72 INTERNATIONAL  
SCALE ASSEMBLY KIT  
CONTAINS 46 PARTS**

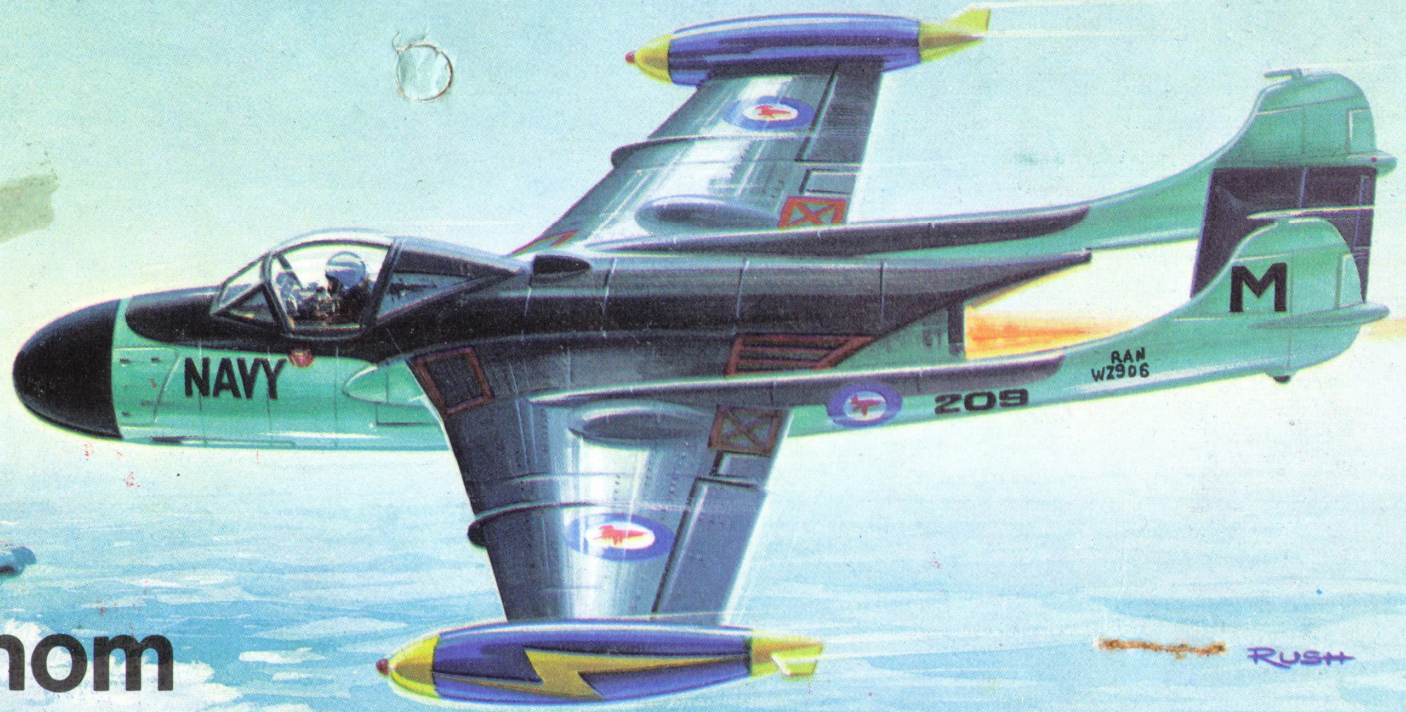

# D.H. Sea Venom

F 253

# How to put your Frog model together

# Méthode d'assemblage de votre modèle Frog

# Wie stellt man Ihr Frogmodell zusammen

Come montare il modello Frog

Hoe zet ik mijn Frogmodel in elkaar

Hur man sätter ihop Frog-modellen

Kootkaa Frog mallinne näin.



Cement parts together.  
Coller les pièces ensemble.  
Teile zusammenkleben.  
Cementeer de delen samen.  
Limma ihop delarna.  
Cementare le parti l'una con l'altra.  
Osat liimataan yhteen.

Do not cement together.  
Ne pas coller ensemble.  
Nicht zusammenkleben.  
Cementeer niet samen.  
Limma inte ihop delarna.  
Non cementare le parti.  
Osia ei liimata yhteen.








Shape with hot knife.  
Former au canif chaud.  
Mit einem heißen Messer formen.  
Vorm met een heet mes.  
Forma med varm kniv.  
Modellare con la lama di un coltello, riscaldata.  
Muovatkaa kuumalla veitsellä.

Choice of parts provided.  
Choix de pièces fournies.  
Mittelieferte Auswahl an Teilen.  
Keuze van beschikbare onderdelen.  
Dessa delar medföljer för valfri användning.  
Particolari a scelta.  
Osien kay to valinnanvaraista.

Paint parts before using.  
Peindre les pièces avant l'emploi.  
Die Teile sollen vor Benutzung bemalt werden.  
De onderdelen voor het gebruik schilderen.  
Måla delarna före användningen.  
Verniciare le parti prima di montarle.  
Maalatkaa osat ennen kokoamista.

Cut with sharp knife.  
Couper avec un couteau tranchant.  
Mit einem scharfen messe schneiden.  
Snijd met een scherp mes.  
Skär men en skarp kniv.  
Tagliare con un coltello affilato.  
Leikatkaa teravalla vietsellä.

Insert small weight.  
Introduire le petit contrepoids.  
Das kleine Gewicht soll eingesteckt werden.  
Een klein gewichtje invoegen.  
Stick in en liten tyngd.  
Introdurre il piccolo peso.  
Lisä tkää pieni paino.

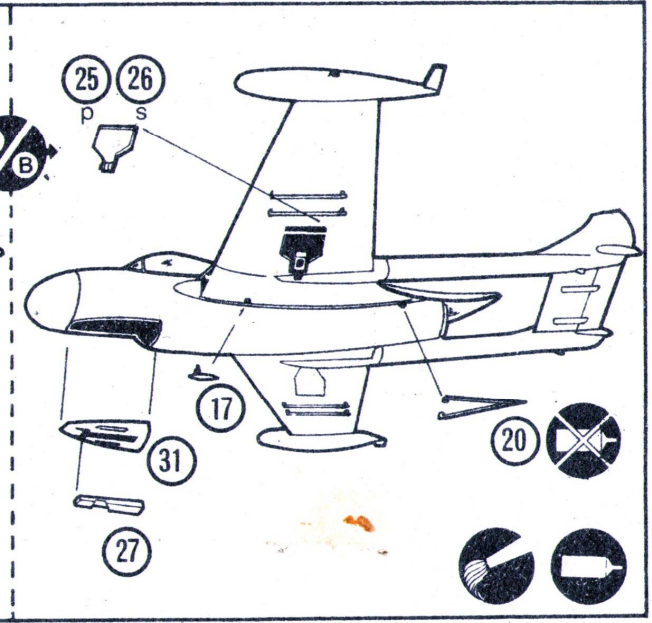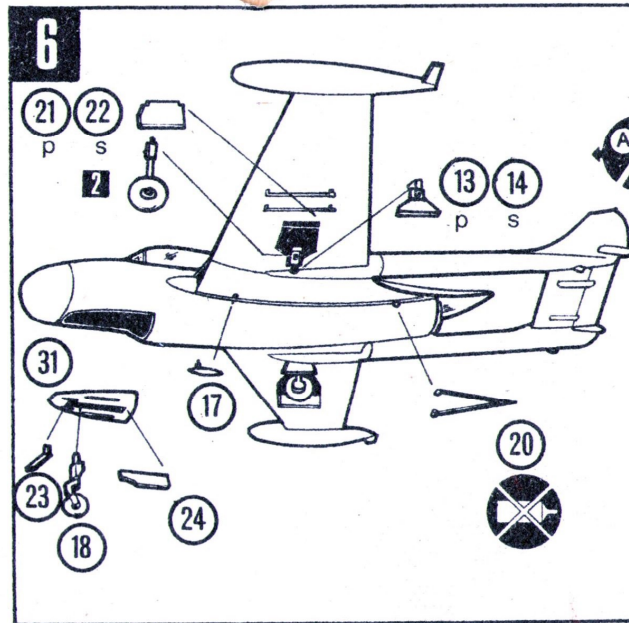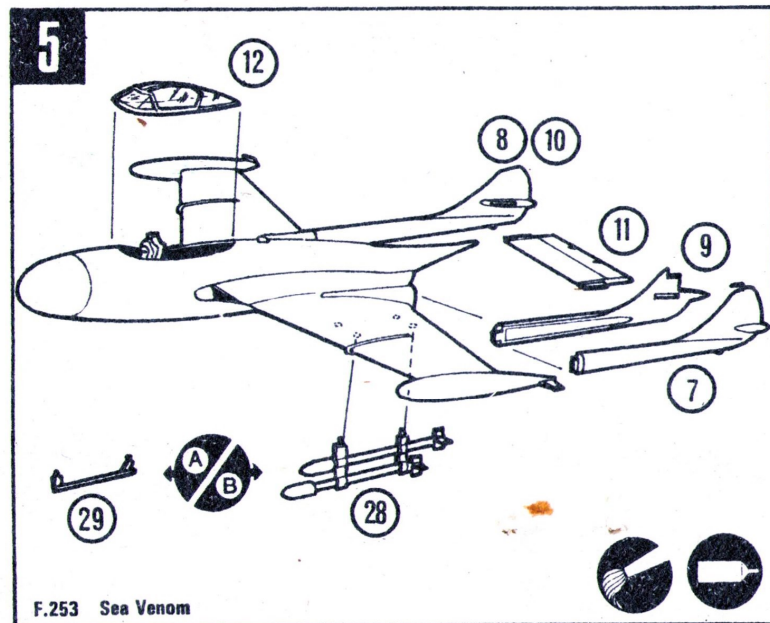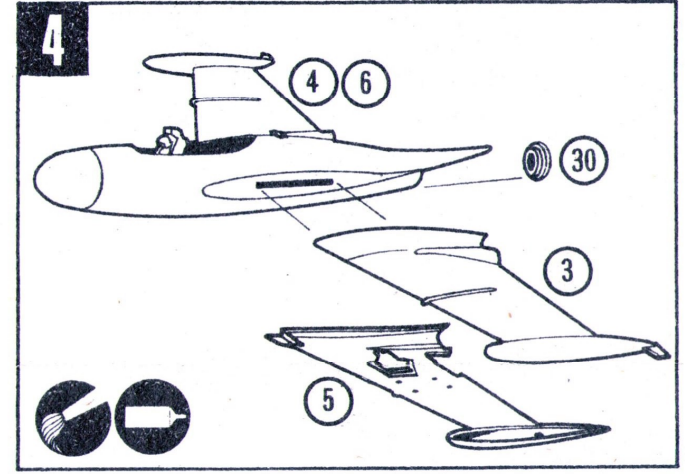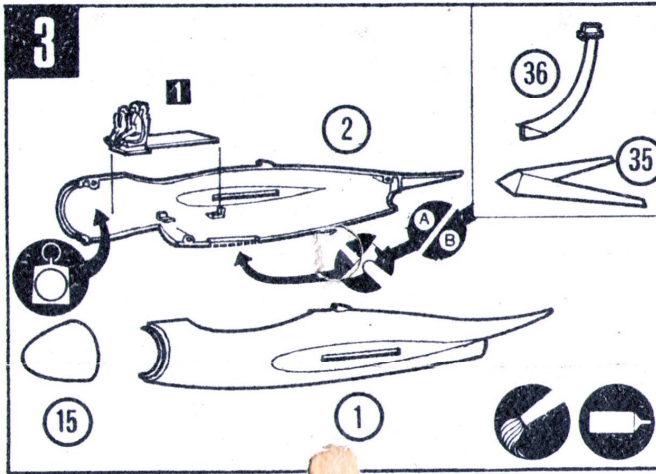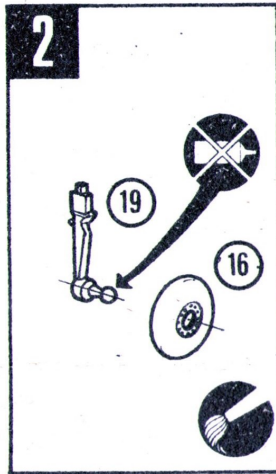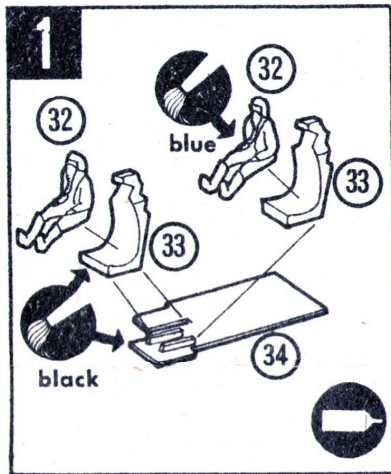


F.253 SEA VENOM - STAGE 5

Paint and apply decals to underside  
of wings before fitting armament

# FROG Colour Painting Guide ©


F.A.W. Mk. 21, 891 Sqn., HMS Ark Royal, Royal Navy, 1955.

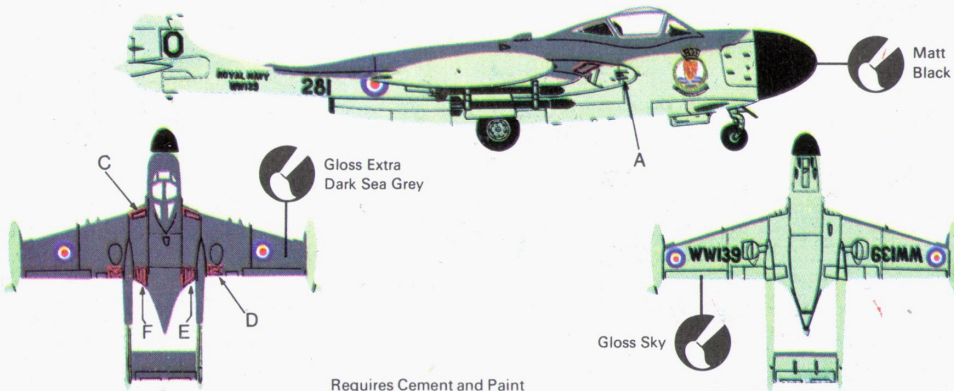

Requires Cement and Paint

# D.H. Sea Venom F.A.W. 21/53

F.A.W. Mk.53, 724 Sqn., HMAS Melbourne, Royal Australian Navy, 1962.

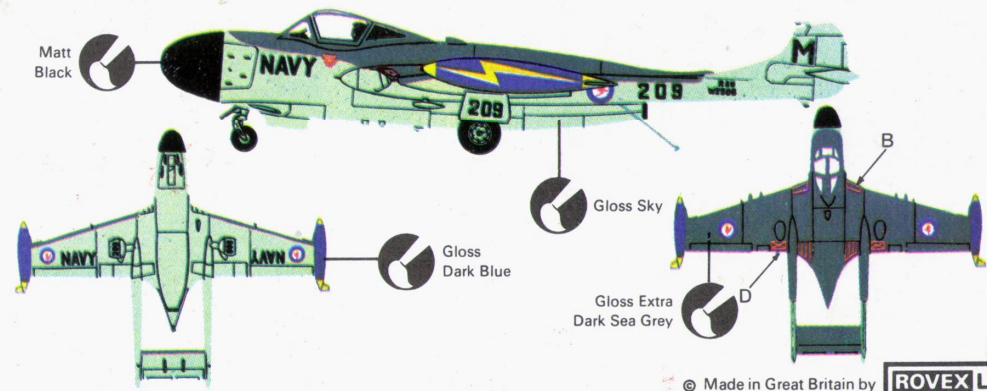

© Made in Great Britain by **ROVEX Limited**



Special features of this kit include ● **46** parts ● Undercarriage up or down ● Optional rockets. ● Decal sheet containing 2 sets of markings in authentic colours



Cette maquette a pour caractéristiques spéciales ● **46** pièces ● Train d'atterrissage relevé ou abaissé ● Feuille de décalcomanie comportant deux marquages séparés



Bijzonderheden van deze bouwdoos ● **46** onderdelen ● bewegbaar onderstel ● transfers met twee verschillende aanduidingen



Specialdetaljerna i denna byggsats omfattar ● **46** st. delar ● Landningsställ upp eller nedfällt ● Blad med överföringsbilder, omfattande två skilda markeringar



Die besonderen Teile dieses Gerätes schliessen ● **46** Teile ● Fahrgerüst hochgezogen oder ausgefahren ● Wahlweise Raketen ● Abziehpapier mit zwei verschiedenen Abzeichen



Particolarità del presente Corredo ● **46** parti ● Carello di atterraggio regolabile ● Decalomania con due contrassegni separati