



VargasScaleModels.com




1/35 scale
Italy WWI 305/17

R3D-016



WWI Obice da 305/17 De Stefano



Obice 305-17 De Stefano
Italian WWI Mortar / Howitzer


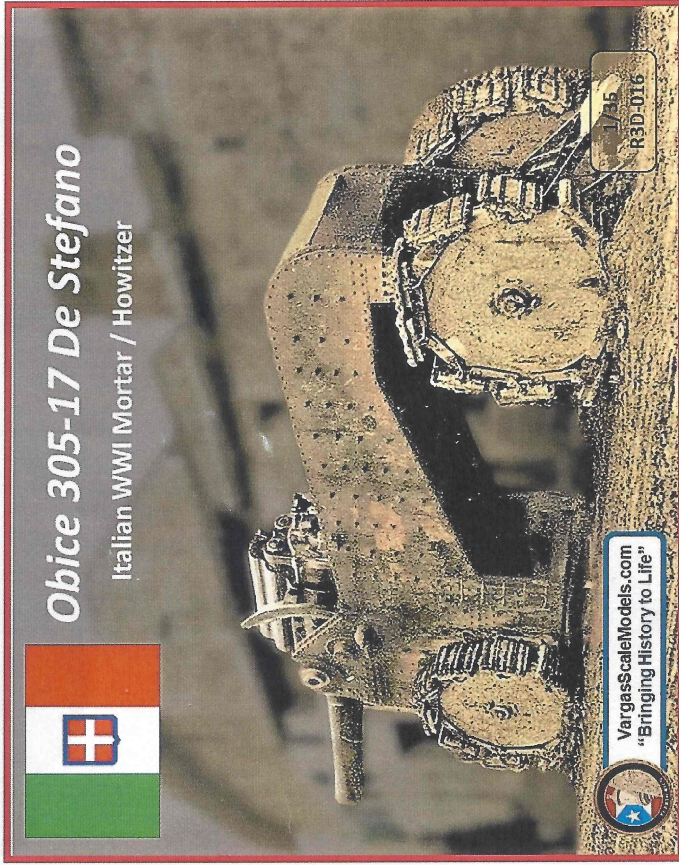


Resin Kit. Clean all parts in warm soapy water, let dry. Use cyanoacrylate glue. Paint and glue not included. For best results use a sandable primer.

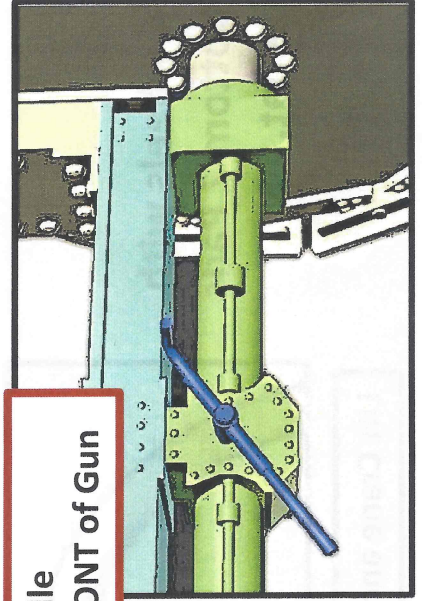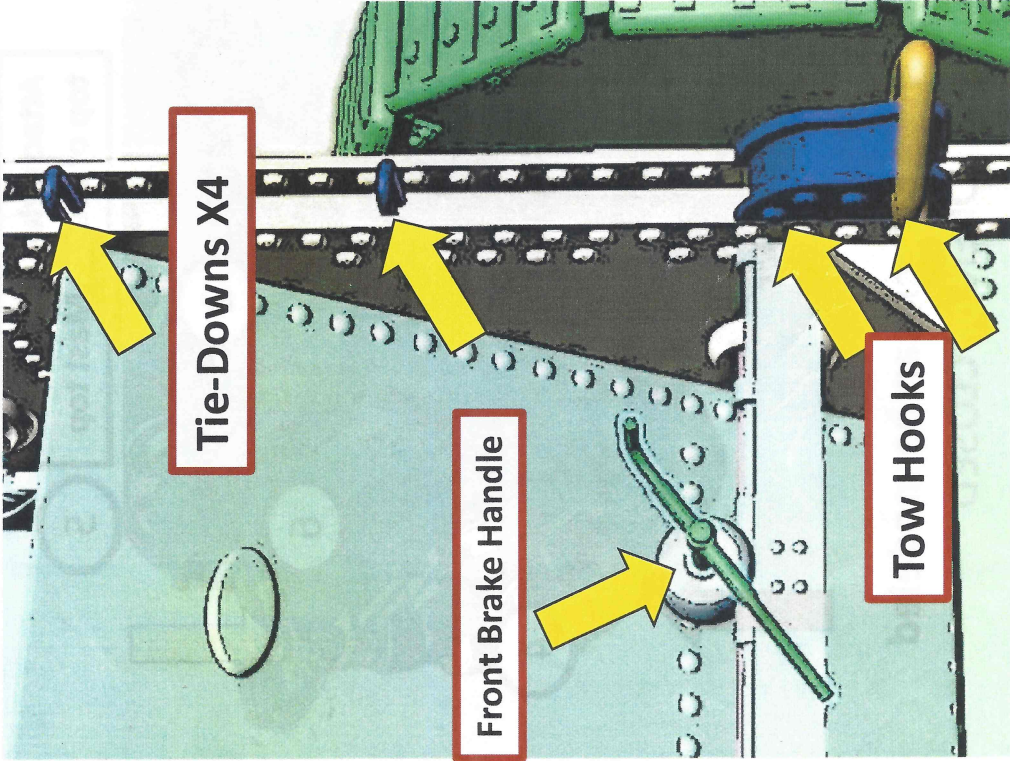


Page 4

Slide shaft through hole.
NO GLUE

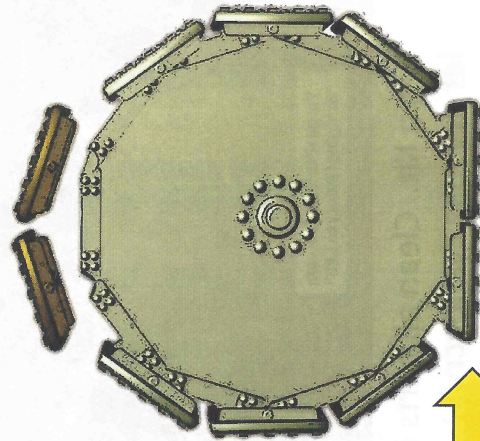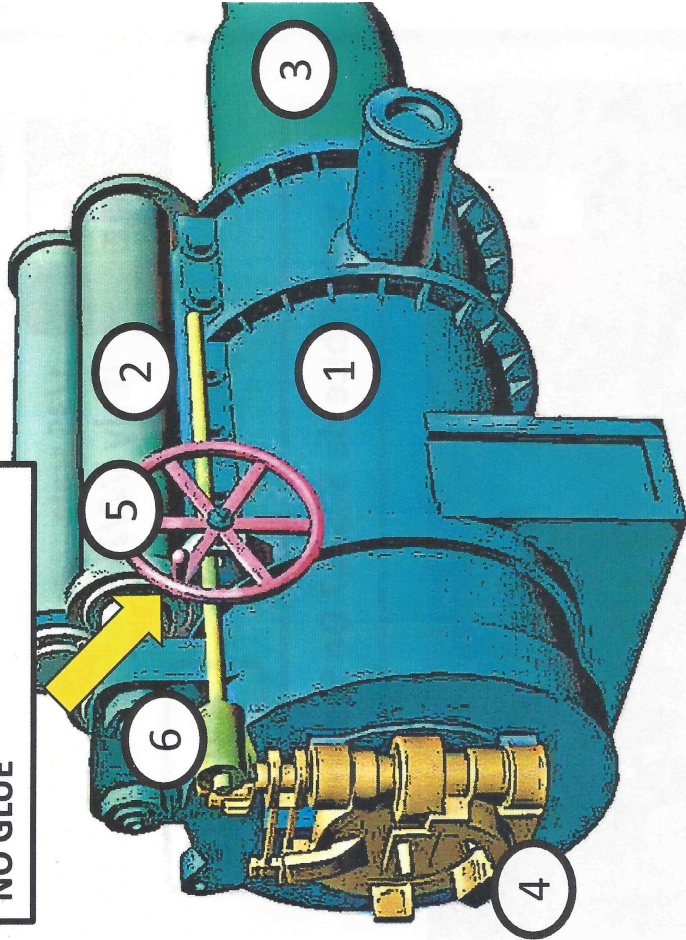


Make 4 wheels with
Pads. Bottom 2 Pads
must be flat.

Breech can be modeled
OPEN or CLOSED

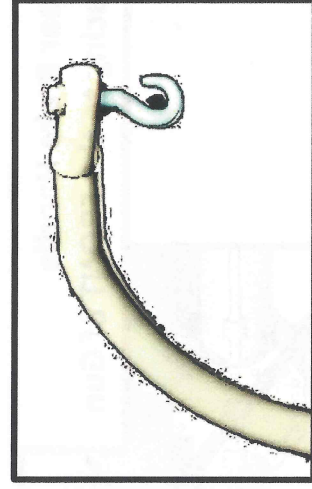


Lift Crane and Pulley Hook

Attach/glue shaft to
top of Breech Mast top

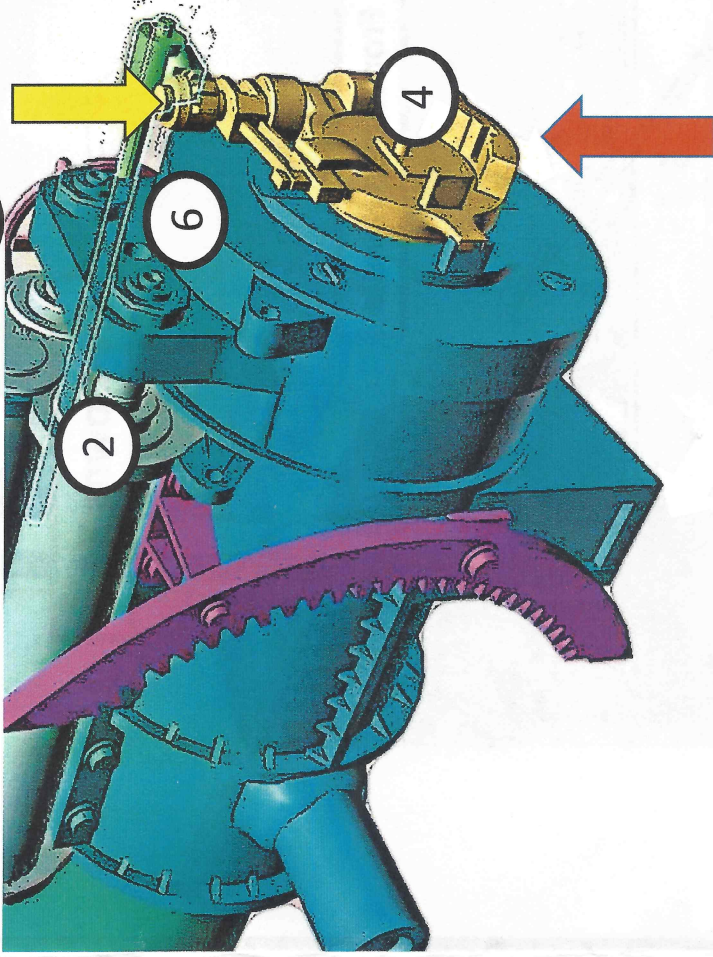


TEST FIT ALL PARTS!



Trap Door Panel Has Hinges
Open ?? Or Close??

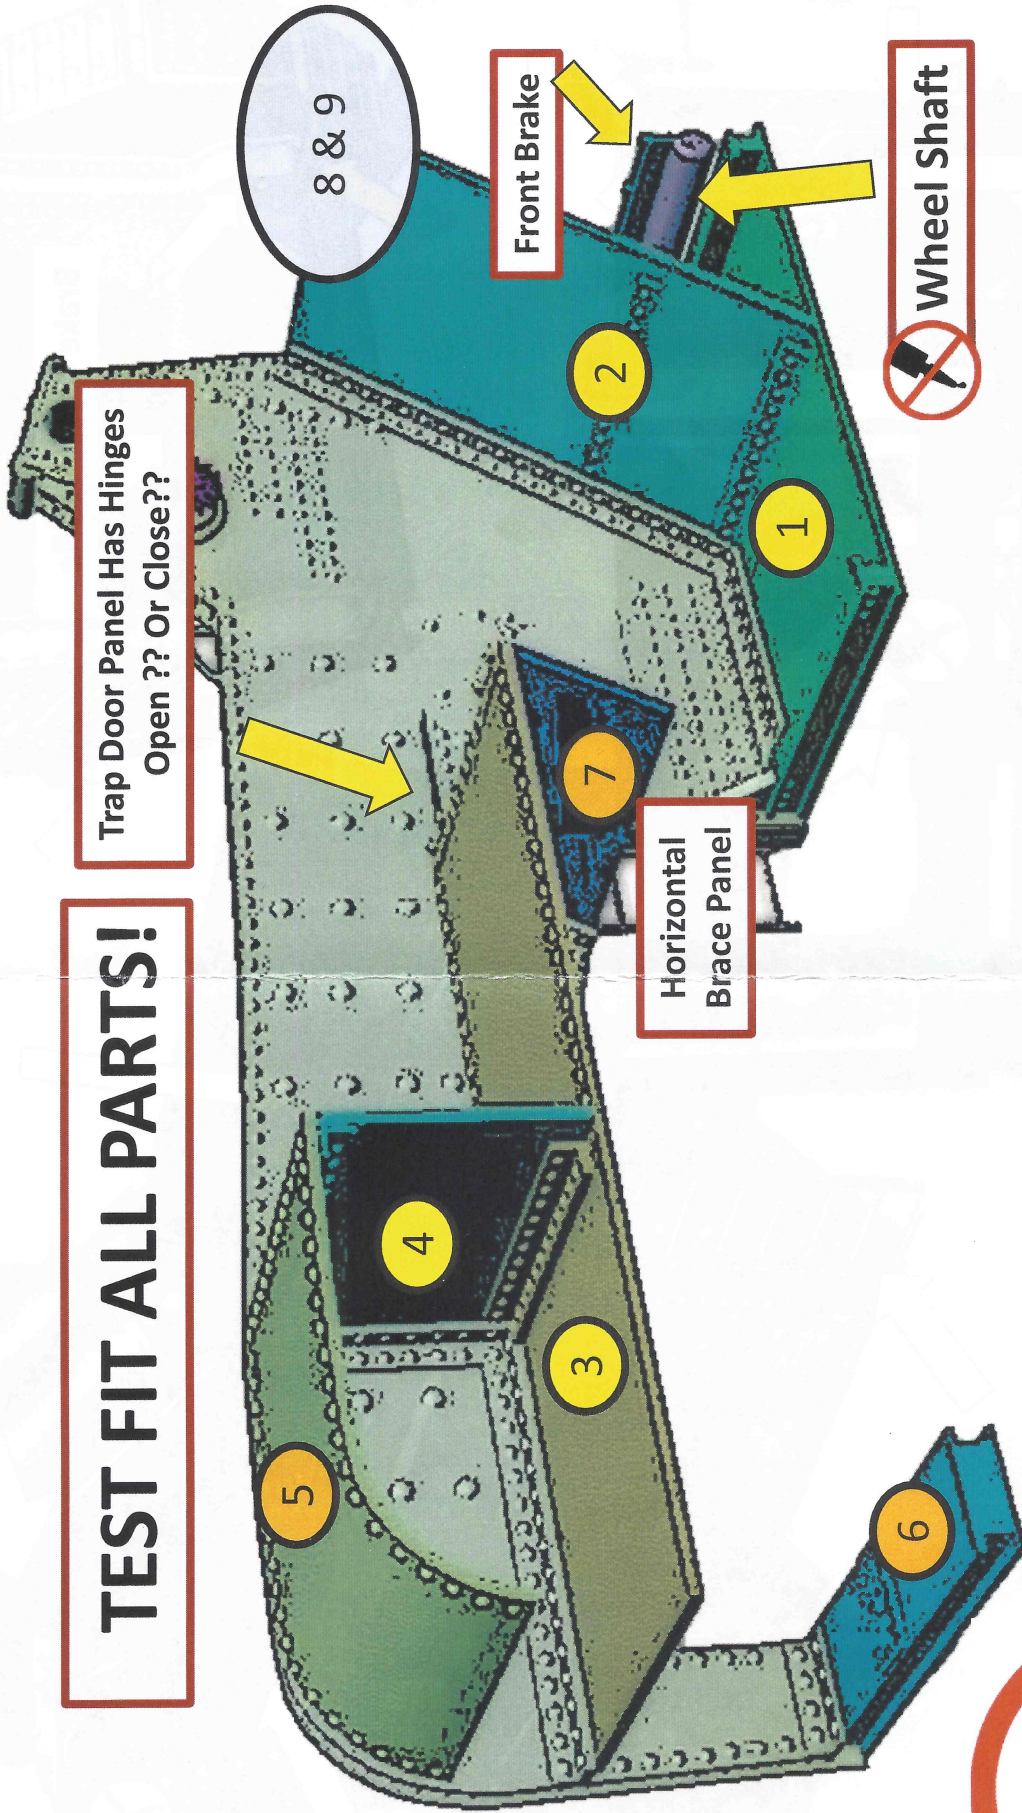

**DO NOT GLUE UNTIL BOTH HALFS FIT
TOGETHER AND GUN ELEVATES**

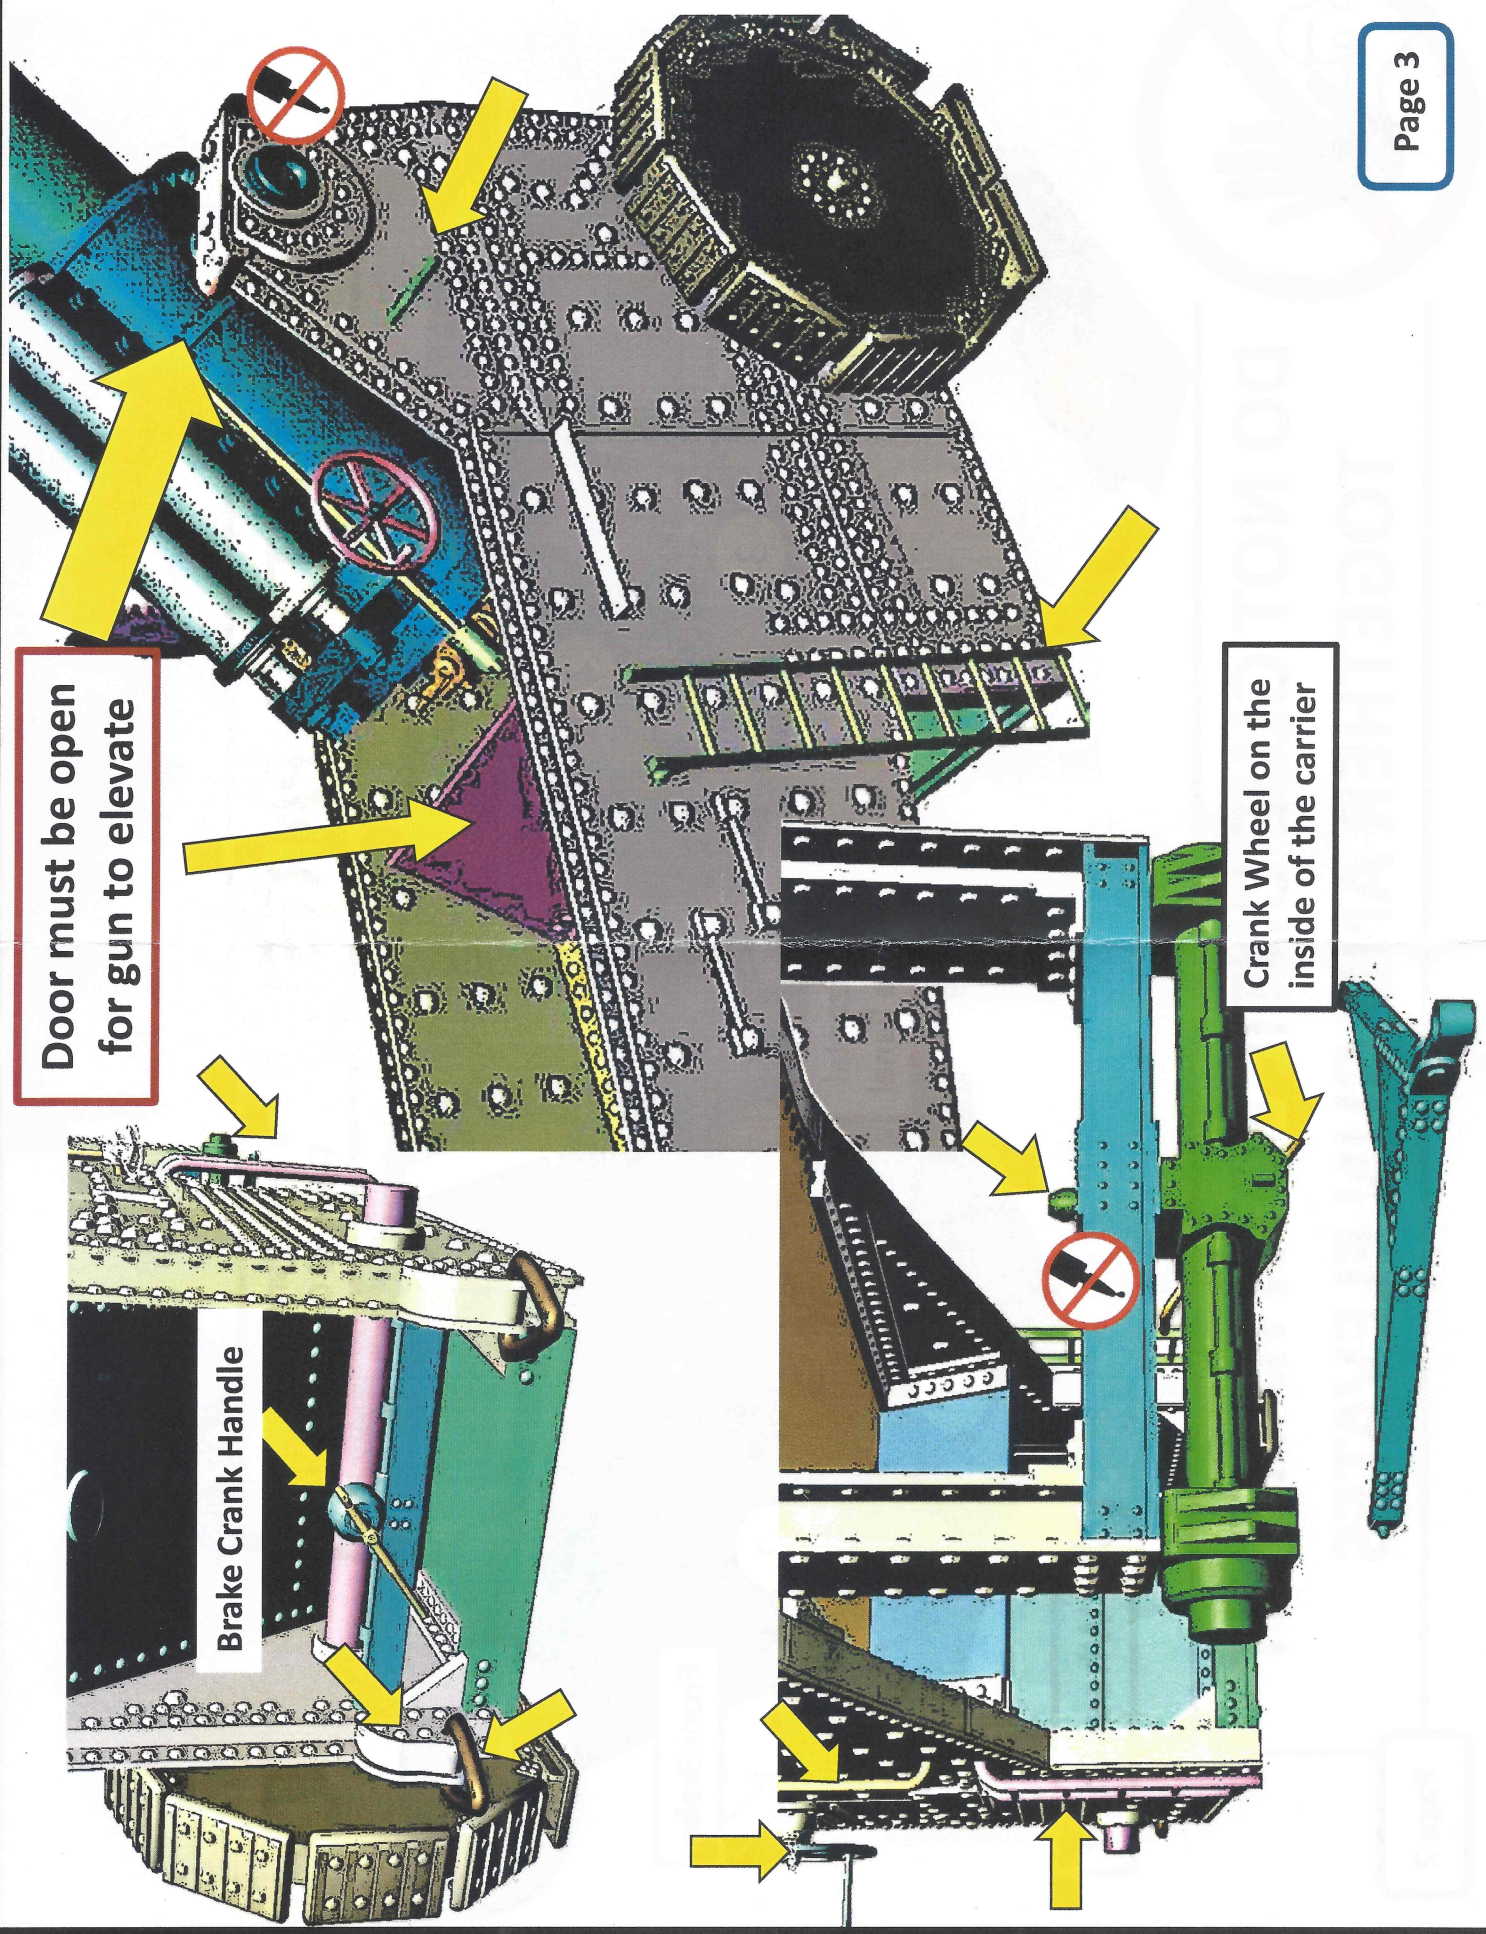

Side crane brackets,
optional

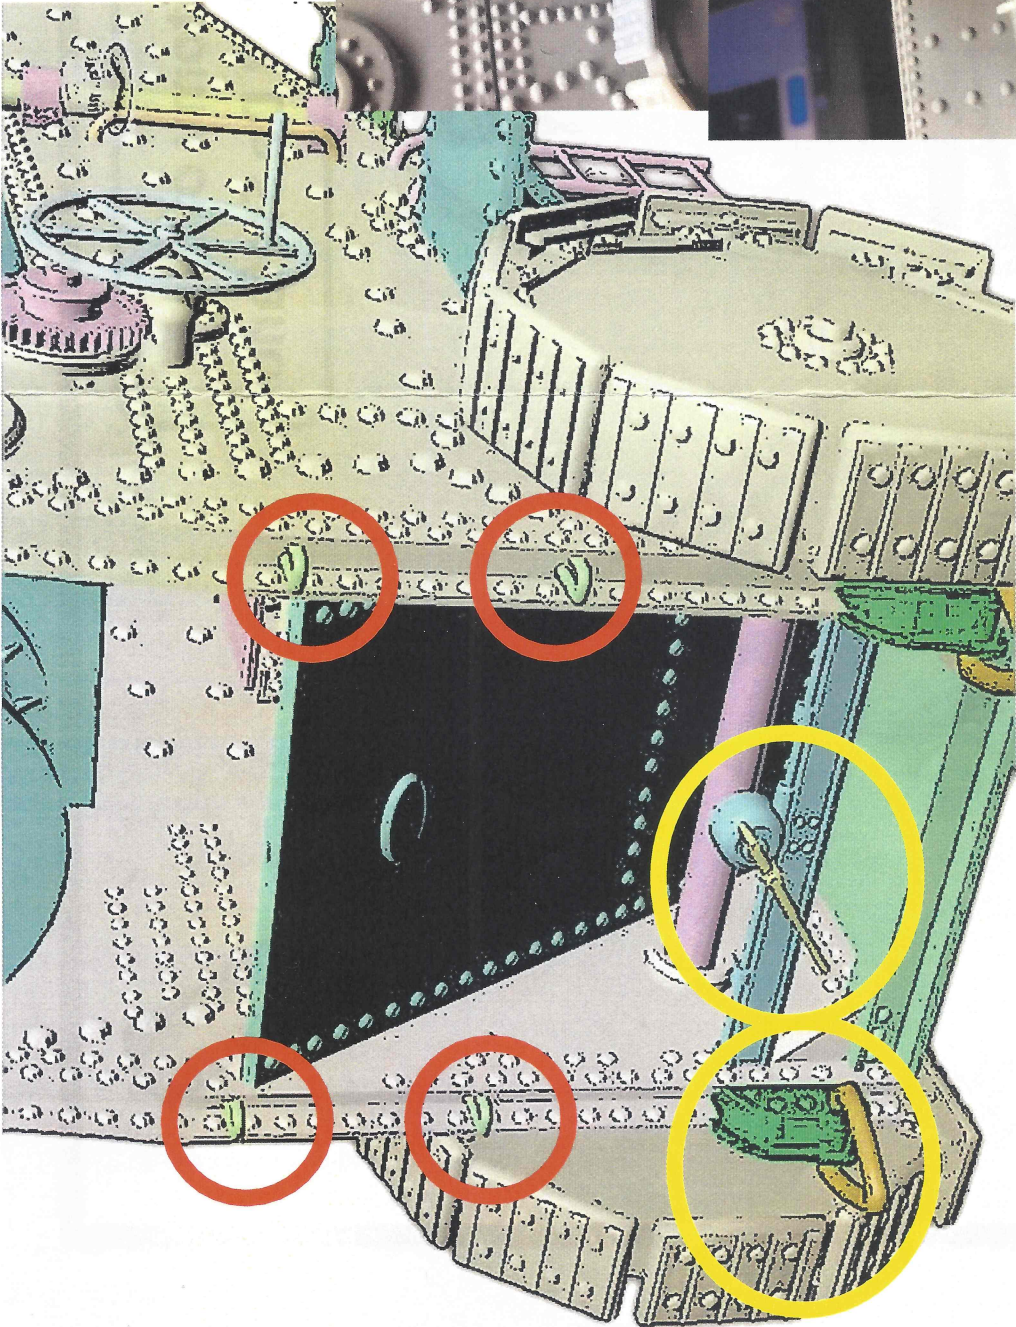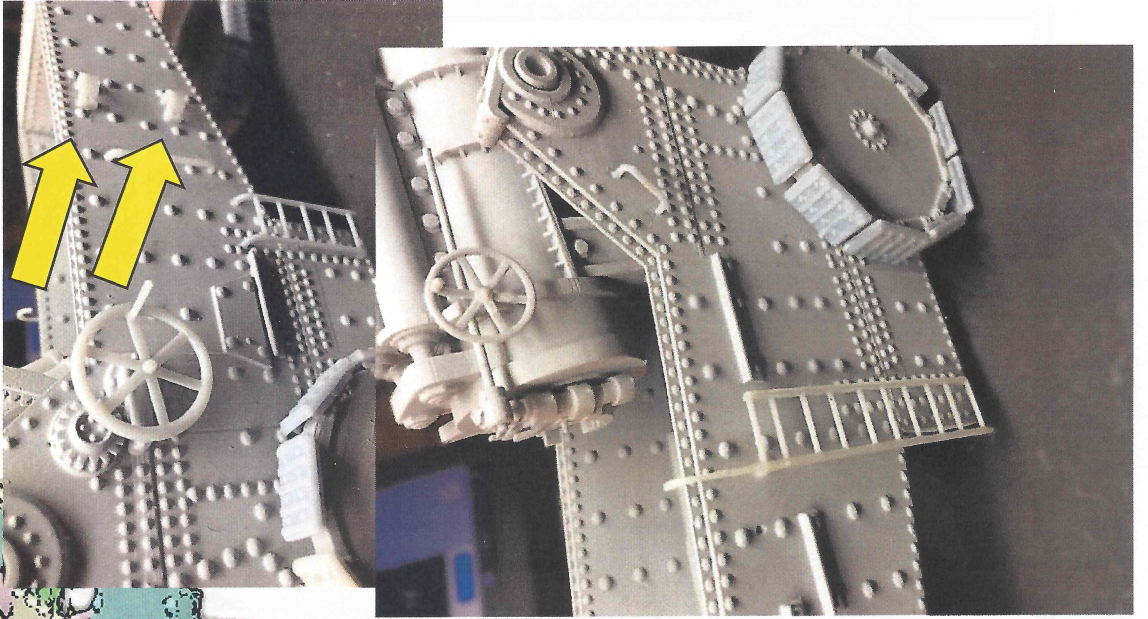

**The anatomy of
Obice da 305/17 De Stefano**

